



CAUTION!

CAUTION! This disk is made for the sole purpose of restoring the operating system and software configuration originally purchased with your computer. **THIS WILL DELETE ALL PERSONAL INFORMATION STORED ON YOUR HARD DISK(S).**

It will erase any programs aside from those included in the original preloaded factory condition. If you are at all concerned about the data contained on your hard disk, **PLEASE STOP NOW** and consult a support representative. THIS DISK IS SPECIFICALLY MADE ONLY FOR, AND FROM THE COMPUTER IT WAS ORIGINALLY PURCHASED WITH; USE ON OTHER SYSTEMS IS IN VIOLATION OF SOFTWARE LICENSES AND MAY BE IN VIOLATION OF THE LAW.

This disk is authorized for use only by original purchaser and we are not responsible for; nor will we support; the results of; or usage by; any unauthorized user. The content contained within is owned and licensed to the original purchaser and may be contingent on documents, disks, or hardware items received in the packaging upon delivery. It is the end users responsibility to adhere to the rules and regulations of the companies whose content is contained within.

PLEASE TAKE GOOD CARE OF THIS DVD, we are under no obligation and in some cases unable to provide replacement copies of this Restore DVD.

Restore Notes:

*: Every computers BIOS utility screen varies slightly, so the pictures or wording may be slightly different from one computer to the next.

**:

As a quicker option, Some BIOS's allow you to hit the "F8" key to bring up a boot menu, instead of hitting "Delete" and following the instructions to permanently change the Boot order. Here you can manually choose the DVD drive as your boot option without changing the boot order permanently.

***:


If you have ANY doubts as to which drive you have plugged in, Where your data is stored, or if you are worried about your data at all make sure to contact a support Representative for help. We can help you narrow down which drive is your main drive. We usually recommend unplugging any drives that you are not OK with erasing, Data drives ect.

Restoring your Computer:

* REMEMBER TO BACKUP YOUR DATA BEFORE USING THE RESTORE DISK


* If you don't see the Boot CD prompt, instructions for changing boot order are at the end of these instructions.

1. Insert the DVD in the optical drive and reboot the PC. If the DVD is working properly a screen asking for you to "Press any key to boot from CD or DVD" will appear like this:

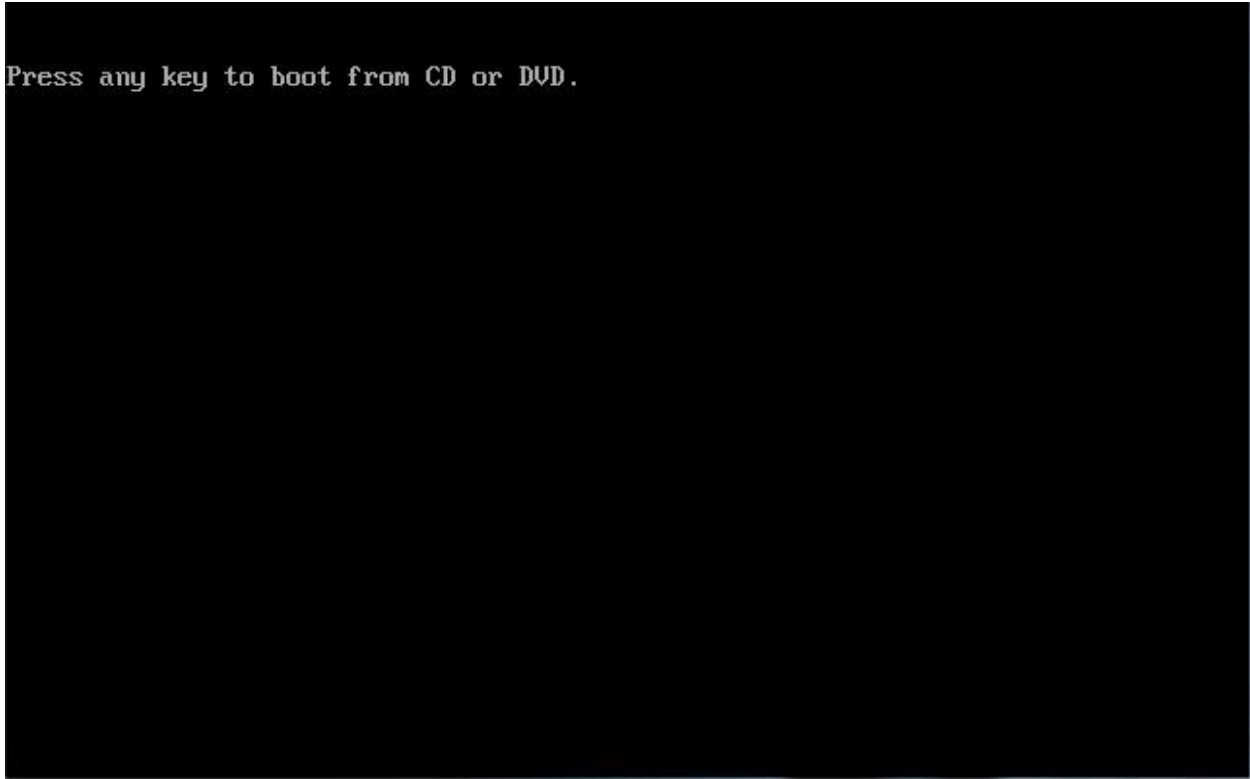


```
Press any key to boot from CD or DVD.
```


2. Once you press a key you will see a loading screen that says "Windows is loading files..."

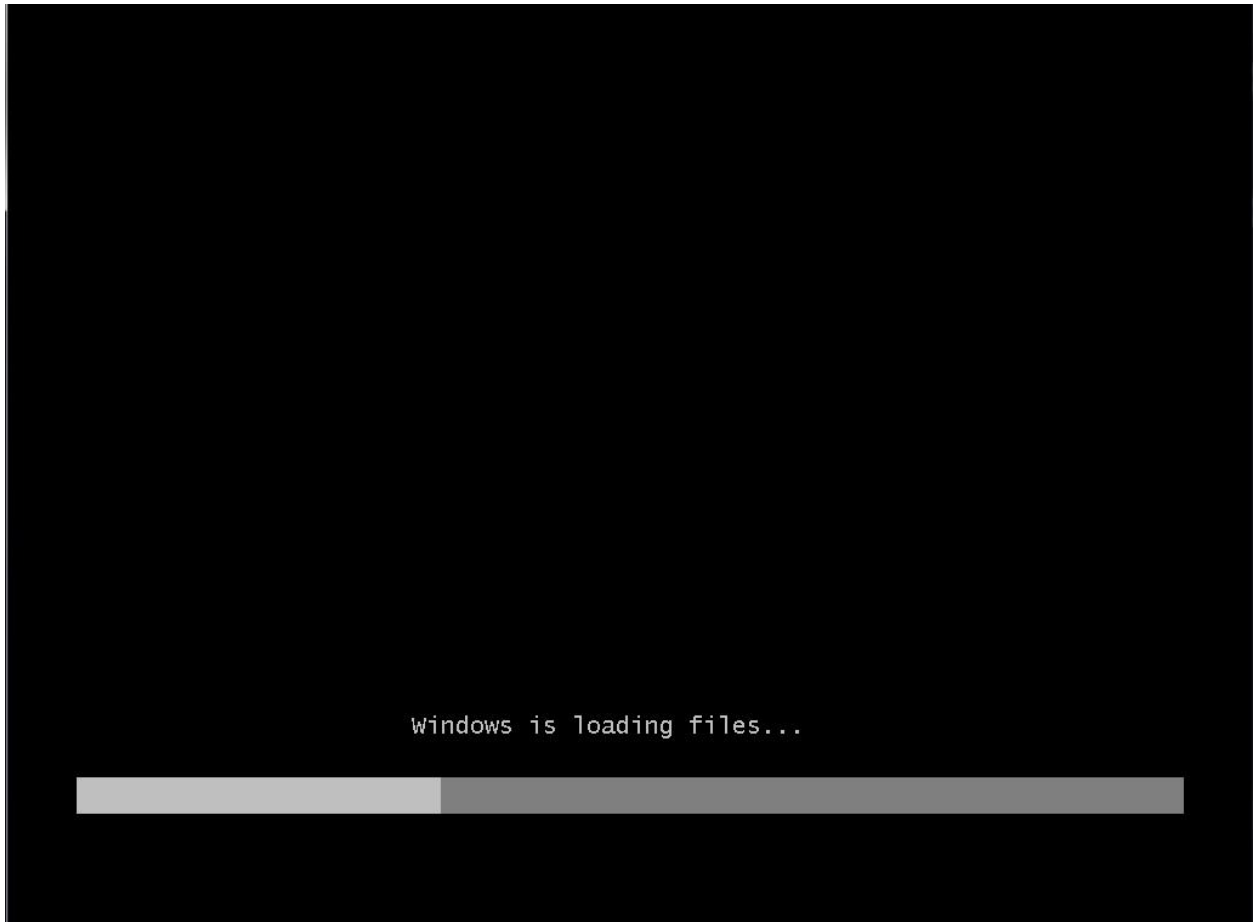


3. And another loading screen with the Windows logo that says "Starting Windows".

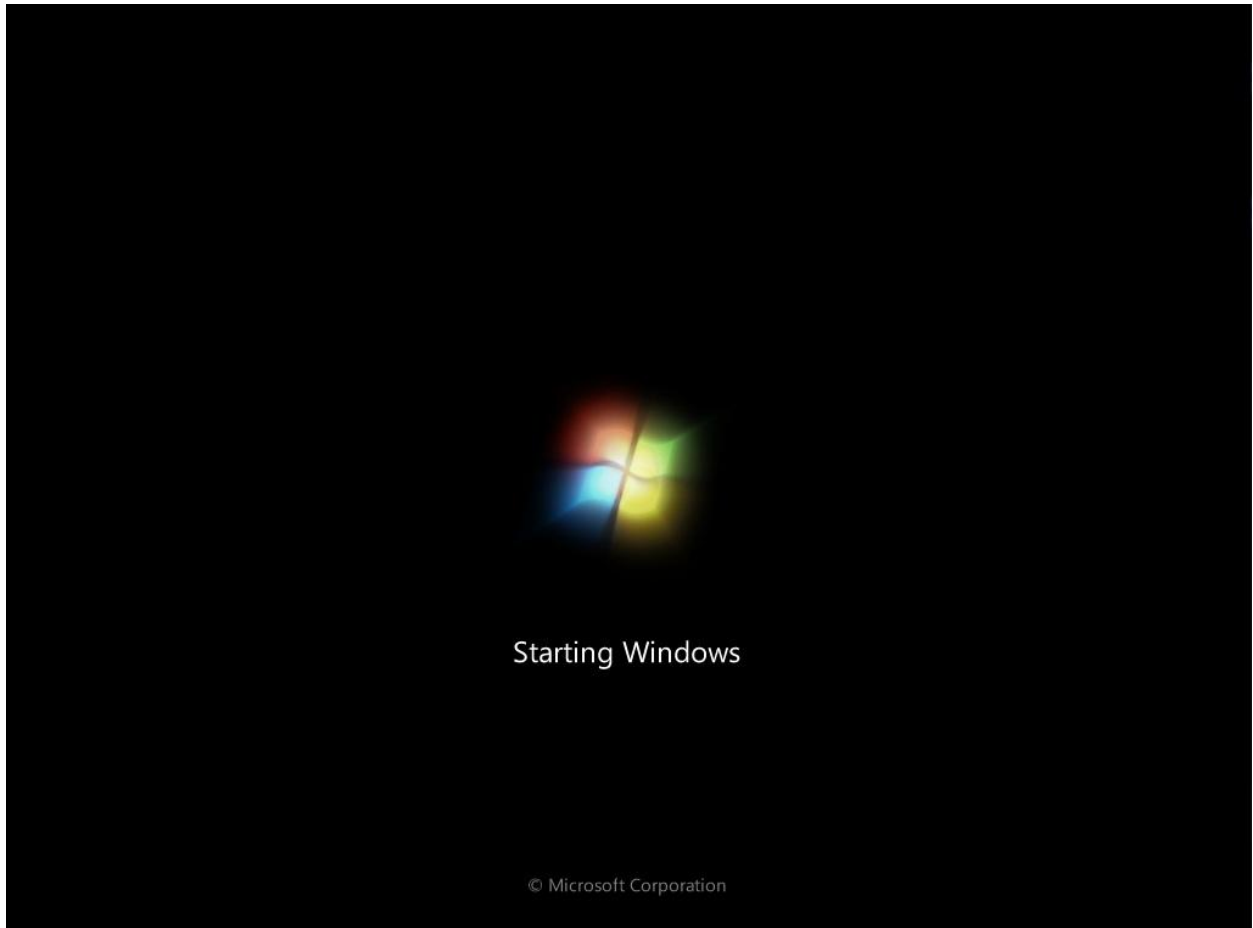


4. After a couple of minutes, once Windows is all loaded up, you will see a dialogue window open with a command prompt, it will ask for you to input which hard disk you would like to restore to. Typically your main hard disk is drive 0, but it can vary if you have more than one disk. **If you have ANY doubts as to which drive you have plugged in, or if you are worried about your data at all make sure to give us a call, we can help you narrow it down.**

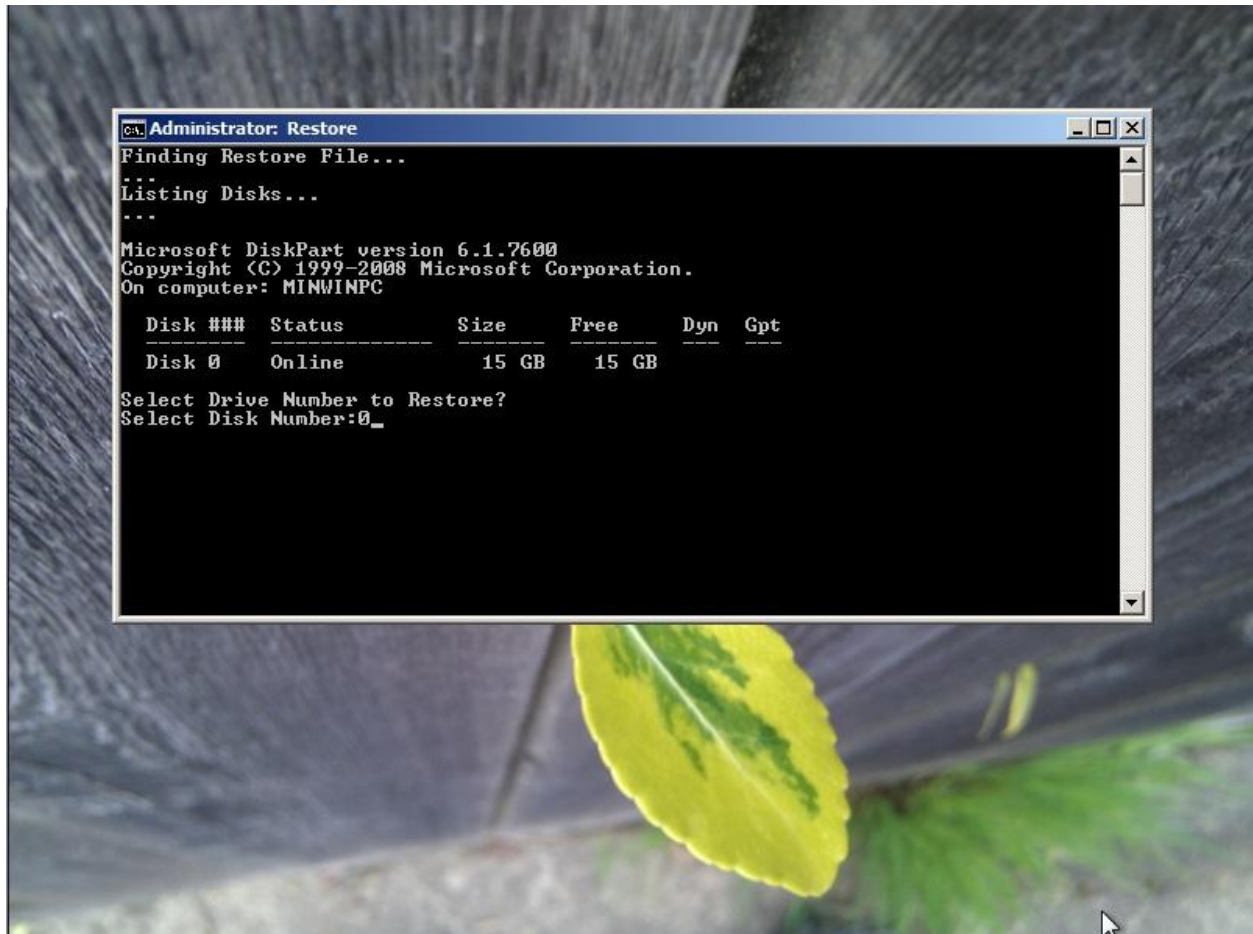


5. Once you specify a drive number, a warning will appear telling you that all the data on the drive you selected will be completely erased.

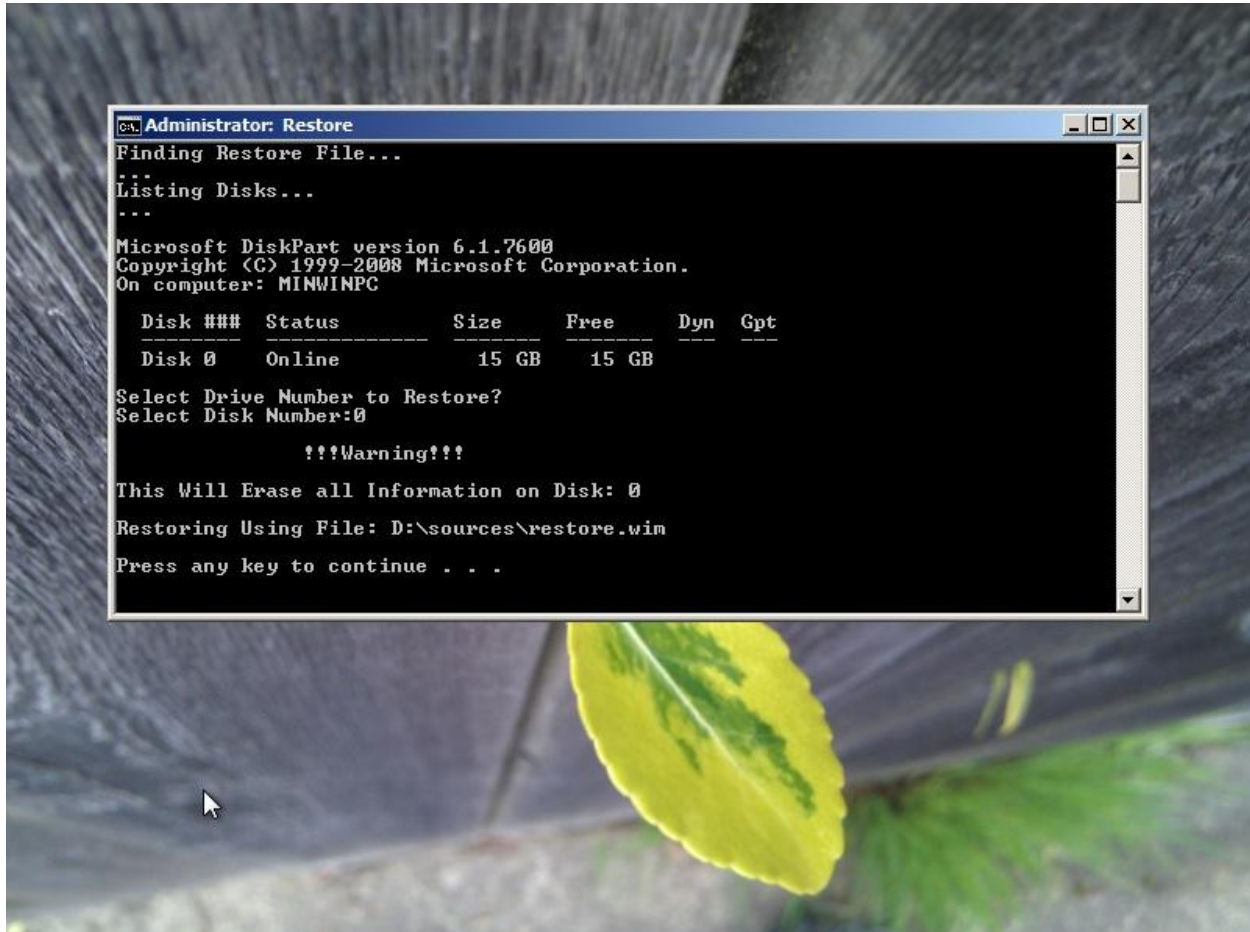

 6. Once you hit "any key" to continue, the program will erase the hard disk and start copying the image file down on to your drive.

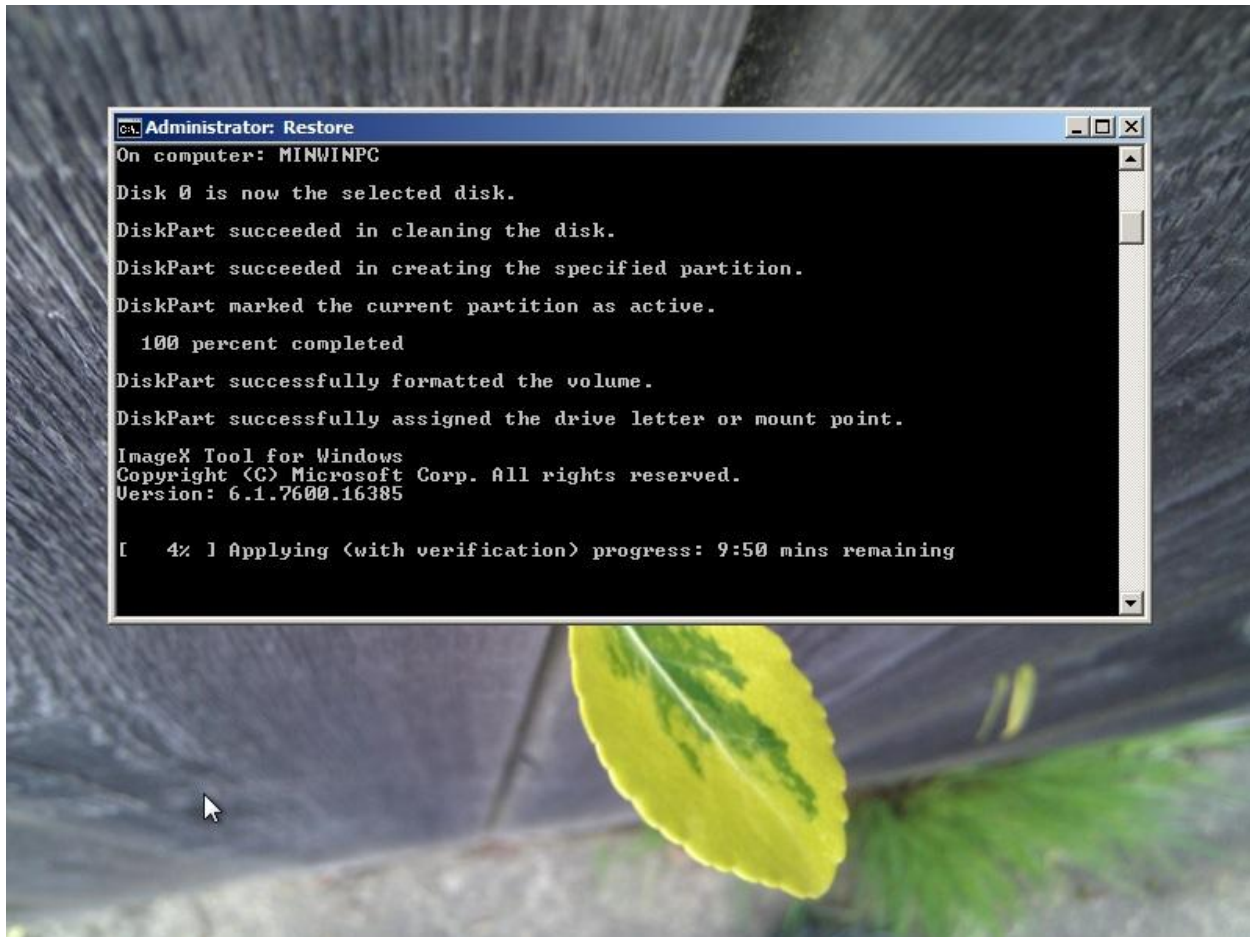

7. Once completed the Program will tell you that the "Restore Completed" and to press any key to continue.

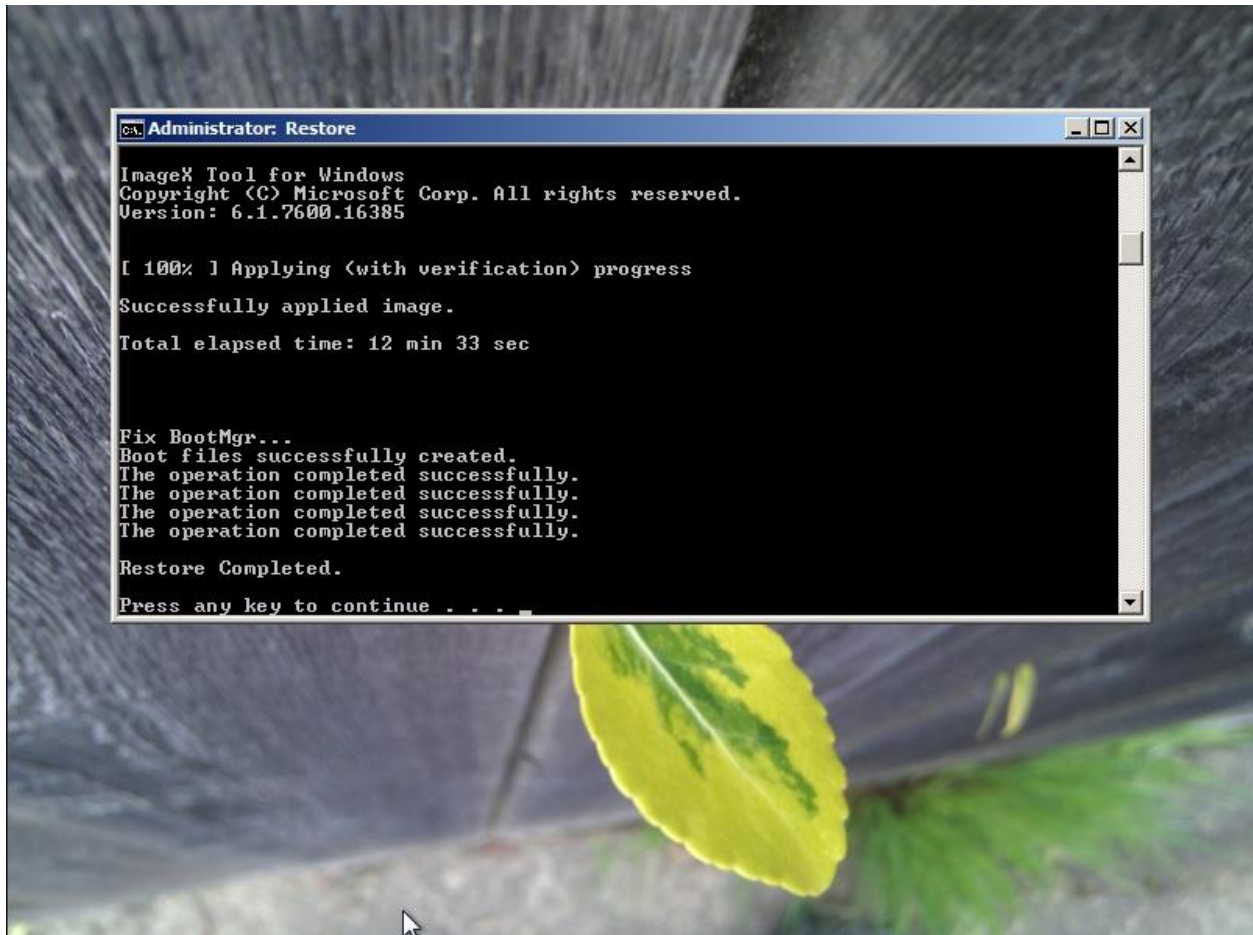

8. At this point just remove the DVD from your drive and reboot the PC. The PC should now boot into the Windows out of Box Experience, where you can set up your username, ect. This is also where the computer will ask you for your windows product ID (With most cases this is located on the right hand side panel of your PC, near the top of the case, towards the front. The CD key is 25 digits, numbers and letters.

CONTACT INFO:

Endpcnoise.com


1721 SE Grace Ave., STE B

Battle Ground, WA 98604


Phone: 360-687-8883

Changing the Boot Order:


1. Make sure your Computer is set to boot off of your Optical or DVD drive first. To do this Hit the "Delete" Key on the CMOS Screen (the very first screen your computer displays, usually has the ASUS logo). This will allow you to enter the BIOS setup utility, once there follow these instructions:

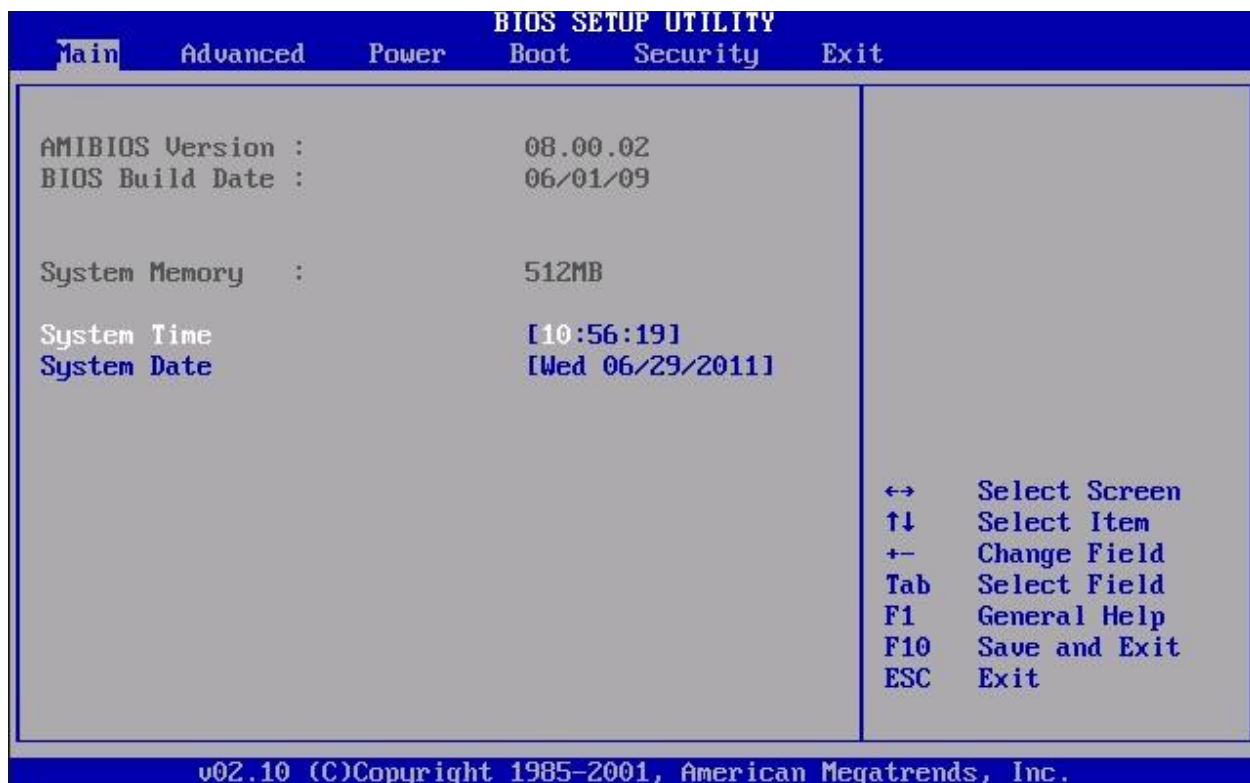

 2. Once in the BIOS Setup Utility navigate to the "Boot" Menu.

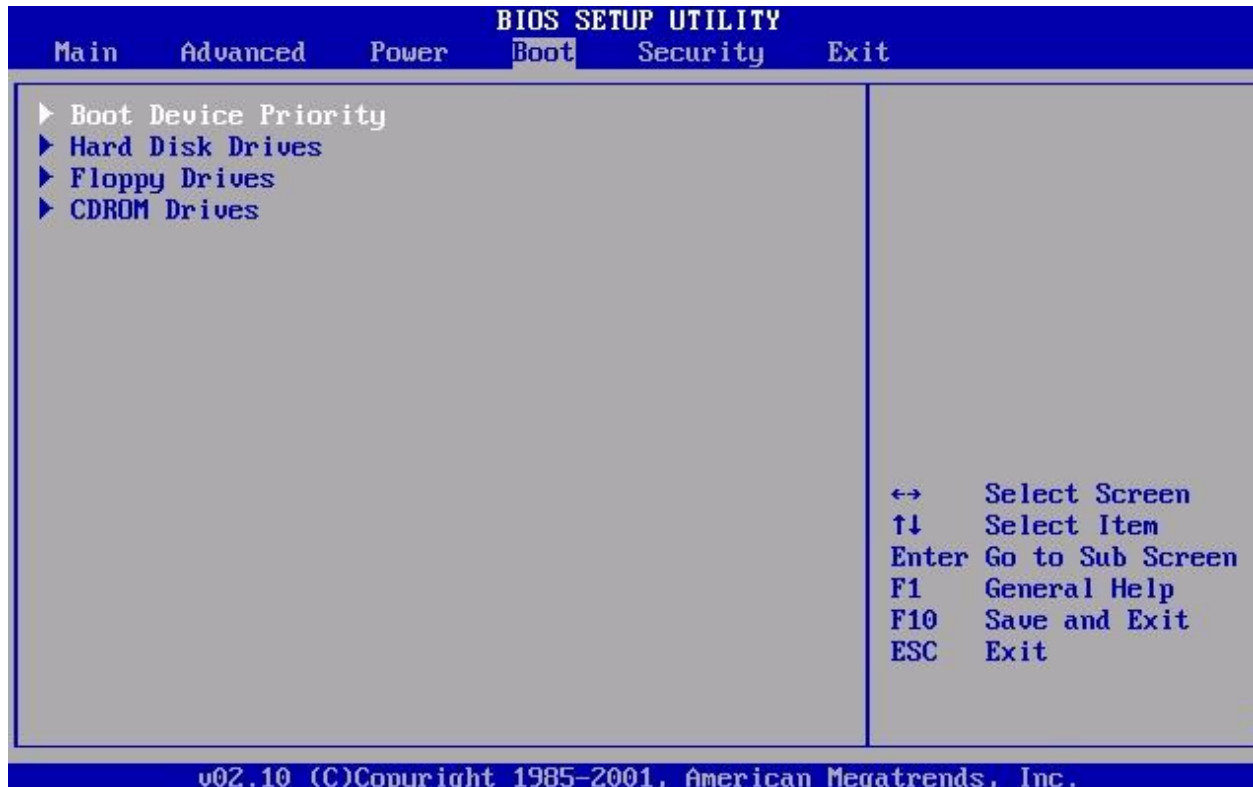

 3. In the boot menu there is a " Boot Device Priority" section, go there and make sure the DVD/Optical drive is the first drive listed.

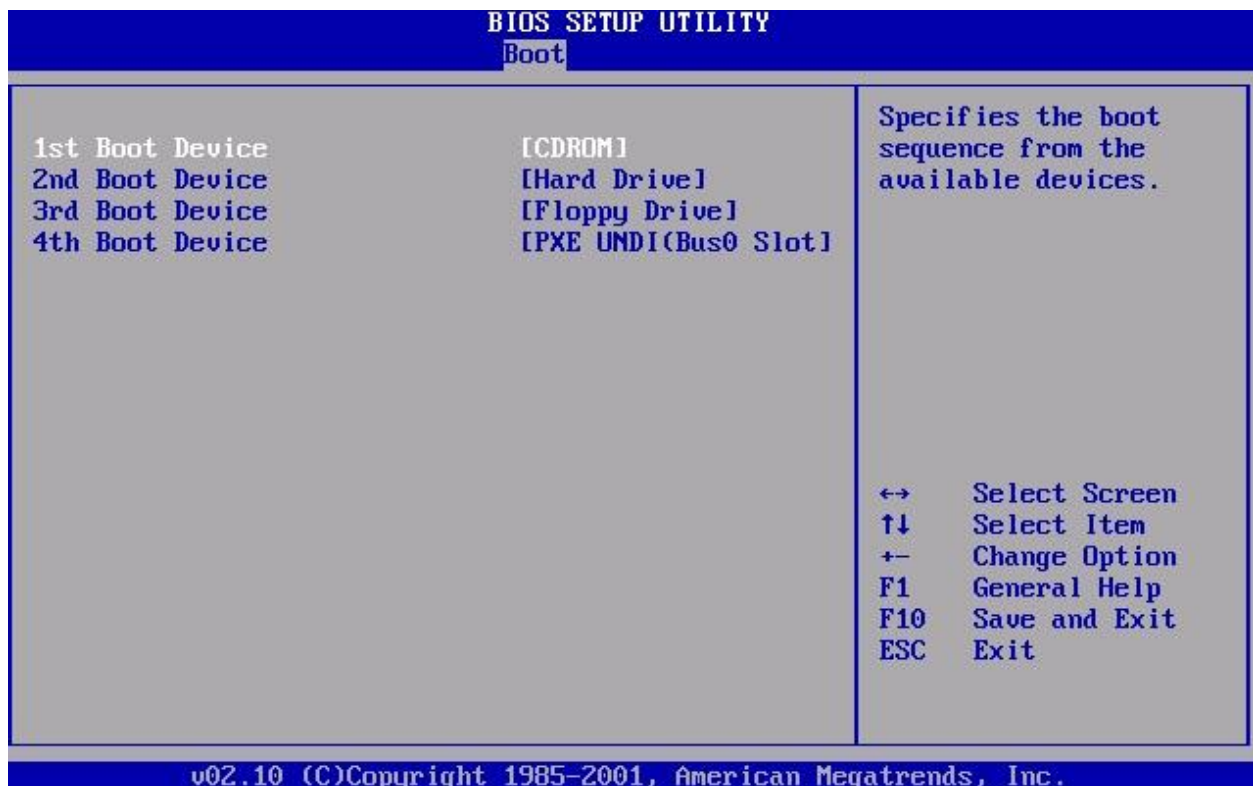

4. Save and exit, the F10 key will bring up the save and exit dialogue box.

